G1 E-HOOKAH HEAD

USER MANUAL



WELCOME TO IMOTO


IMOTO is a portable, charcoal-free ehookah designed for smooth, modern hookah sessions—anytime, anywhere. Easy to use and powered by advanced technology, it delivers clean clouds, rich flavor, and hassle-free enjoyment.

This manual will guide you through setup, usage, maintenance, and safety, so you can get the best performance from your IMOTO.

WHAT'S IN THE BOX

2x Ceramic Bowls 10x Ceramic Bowl Caps



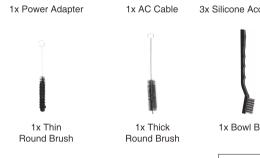



IMOTO G1 E-HOOKAH HEAD PARTS



HOW TO OPERATE

Step 1: Load the Shisha Tobacco Add 22–23g of shisha tobacco into the ceramic bowl and press it down firmly for optimal heating For the best experience, check out our video guide at www.imototech.com. You'll also find more tips and info on our website.



Step 2: Install the Bowl Place the clean ceramic bowl cap over the ceramic bowl, then insert the covered bowl into the G1 e-hookah head. Make sure it is securely positioned before closing the device cap.



Step 3: Power On

Connect the power cable. The blue indicator light will flash once to confirm a successful connection. Press the power button 5 times within 2 seconds to turn on the device. Also, the device will automatically shut-off after 20 minutes of inactivity when connected to power.



Step 4: Set the Heating Mode Choose the right heating mode based on your Shisha tobacco.

Use the up / down buttons to switch • Dark Leaf / Mix - 10 minutes heating duration Blonde Leaf - 12 minutes heating duration
 Red Leaf - 14 minutes heating duration



Step 5: Preheating and Temperature Adjustment Press the power button twice to start preheating. The screen will

begin a countdown, based on different time periods chosen by the level, and the red indicator will flash during the preheating During preheating, press the power button once to pause heating, the indicator will then turn solid blue.



SHENZHEN EIGATE TECHNOLOGY CO., LTD. Floor 1-4, Building 3, No.14 Jian'an Road, Shajing Sub-district, Bao'an District, Shenzhen, Guangdong Province, China Tel: +86-755-8149-9783

Designed in California

Responsibly made in China
Manufactured by Eigate

ROHS 21+

Once preheating is completed, the green indicator light will stay on, indicating that the device is ready for use. The countdown on the screen will end and switch to a 1-hour timer, indicating active • Use the Up / Down buttons to fine-tune the temperature in

±20°C increments. • During use, press the power button once to pause operation, the indicator will then turn solid blue.



Removal Tool

1x G1 E-Hookah Head

Pick up the hose and mouthpiece, then inhale to begin your session. The device provides up to 60 minutes of continuous use. During use, the indicator remains green. When the session ends, a yellow indicator light will turn on



Step 8: After Your Session

Once you have finished your session, carefully unplug the device from the power source. Allow it to cool down completely before handling, cleaning, or storing it.



CLEANING AND MAINTENANCE

clean and maintain the device regularly.

• Ensure device is unplugged and completely cooled before cleaning. Use cup removal tool to carefully remove the used bowl, allow it to cool, and dispose of it safely.



To ensure optimal performance and long-term stability, please



Gently wipe the ceramic bowl and surrounding areas with a soft,

absorbent cloth or paper towel. Clean the inner walls of the bowl using a damp, non-abrasive sponge and mild soap. Use the pro vided brush to thoroughly clean the inside of the ceramic bowl. Don't forget to clean the bowl channel with the brush.



parts to prevent damage.

• Rinse the glass water tank, hose and mouthpiece under warm water with mild soap. Avoid using abrasive scrubbers on any

DEVICE WARNING INDICATORS

① Short Circuit



② Open Circuit or Sensor Error



③ Over Temperature



 Over Voltage or Under Voltage Issue: Voltage is above 18V or below 12V.



⑤ Heating Time-Up Issue: Heating time exceeded 60 minutes.



Issue: A short circuit occurred in the device.



Issue: Open circuit or temperature sensor malfunction.



Issue: Temperature exceeds the device's safety limit.







IMOTO USAGE PRECAUTIONS 1. Not Waterproof

The device is not waterproof. Do not wash or splash water on any part of the unit.

2. Do Not Open While In Use

Do not open the device cap during operation. 3. High Temperature Warning

The device cap and area around ceramic bowl become very hot during use. Do not touch these areas. 4. Ensure Proper Device Cap Closure After closing the device cap, ensure it is flush and fully aligned

with the top of ceramic bowl cap. 5. Silicone Replacement Caution When replacing the bottom silicone seal, be aware that residual

liquid may be present. Use protective measures to avoid skin

7. Avoid Extended Pauses During Use

exceed 6 minutes of idle time.

6. Avoid Restarting During Use Do not shut down and restart the device mid-session. Restarting while hot may lead to excessively high preheating temperatures, which can burn the material.

To maintain optimal smoke density and flavor, avoid pausing inhalation for too long during a session. It is recommended not to



WARRANTY & SUPPORT

Enjoy exclusive warranty coverage, professional customer support, and comprehensive service assurance.
Please visit our website or contact our support team at: support@imototech.com

Website: www.imototech.com/support/warranty

Or simply scan the QR code below.

